



Lenovo G70-80 RAM Replacement

Replacement guide for the RAM of the Lenovo G70-80.

Written By: Alexis Buford



INTRODUCTION

Outline what you are going to teach someone how to do.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Turn off the computer.
- Set the computer upside down with the back facing up.

Step 2



- ⓘ Located directly below the back plate will be two switches near where the battery is located.
- With the battery facing you, slide the battery switch on the right side of the laptop towards the right.
- ⓘ Once it is unlocked, you will see a red indicator next to the switch.

Step 3



 
- i** After the switch on the right is unlocked, you will hear a click, and you should see a red indicator next to the switch.
- Slide the left battery release switch to the left.
 - While holding the switch to the left, lift the battery.

Step 4




- Remove the battery.

Step 5 — RAM

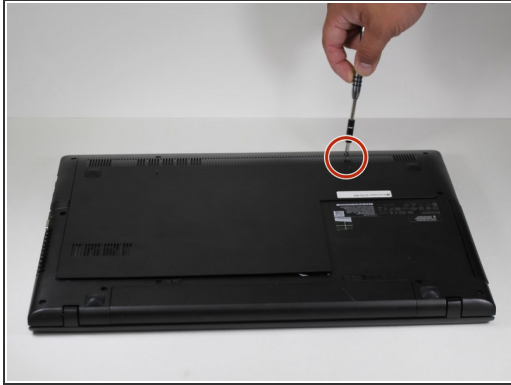

- Remove the placeholder screws and pull off the backplate.

 Step 6

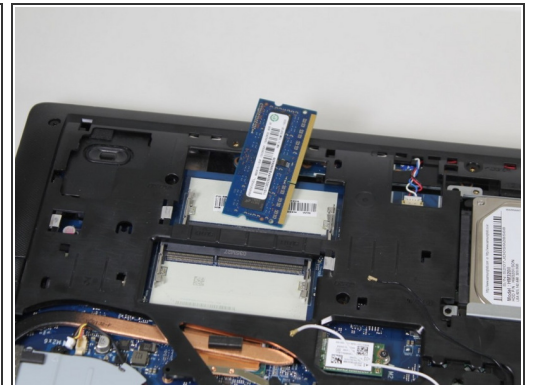

- Carefully pull the two metal retaining clips away from the sides of the RAM module.
- ⓘ As the clips release, the RAM module should pop up at an angle.
- Remove the RAM from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-06 05:35:02 AM.